



71006 BATTERY DISCONNECT

<u>ITEM NO.</u>	<u>QTY.</u>	<u>PART NO</u>	<u>DESCRIPTION</u>
1	1	90832	BRACKET - BATTERY DISCONNECT SWITCH
2	1	40303	BATTERY DISCONNECT SWITCH
3	2	82372	BOLT, HEX 3/8-16 x 1" Lg
4	2	85036	NUT, LOCK 3/8-16
5	4	85113	WASHER, FLAT 3/8
6	1	40742	TRIPLE BATTERY BOX CABLE POSITIVE
7	1	90919	TRIPLE BATTERY BOX CABLE POSITIVE
8	1	40303-1	SWITCH PLATE, DISCONNECT ON/OFF